

Energizer.



UB2609

Specification

Model Name: UB2609
Cell Type : Lithium Ion
Battery Capacity : 2600mAh/ 9.62Wh
Single earbud capacity : 50mAh
Rated Input : 5V/ 0.5A (Max.)
Rated Output : 5V/ 1A (Max.)
Bluetooth Version : 5.0
Impedance : $\Phi 6\text{mm } 32\Omega$
Transmission distance : 10M
Frequency Range : 20Hz~20KHz
Protocols : HSP/ HFP/ A2DP/ AVRCP
Dimensions : 82(L) x 53(W) x 36(H) mm
Weight : 98g \pm 5g

Package Content



 
Charging case



Energizer earbuds



Charging cable

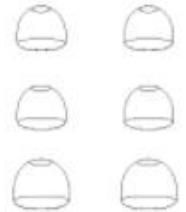


Gel tips x 3
(total 3 pairs in the package)



User manual

 Product introduction

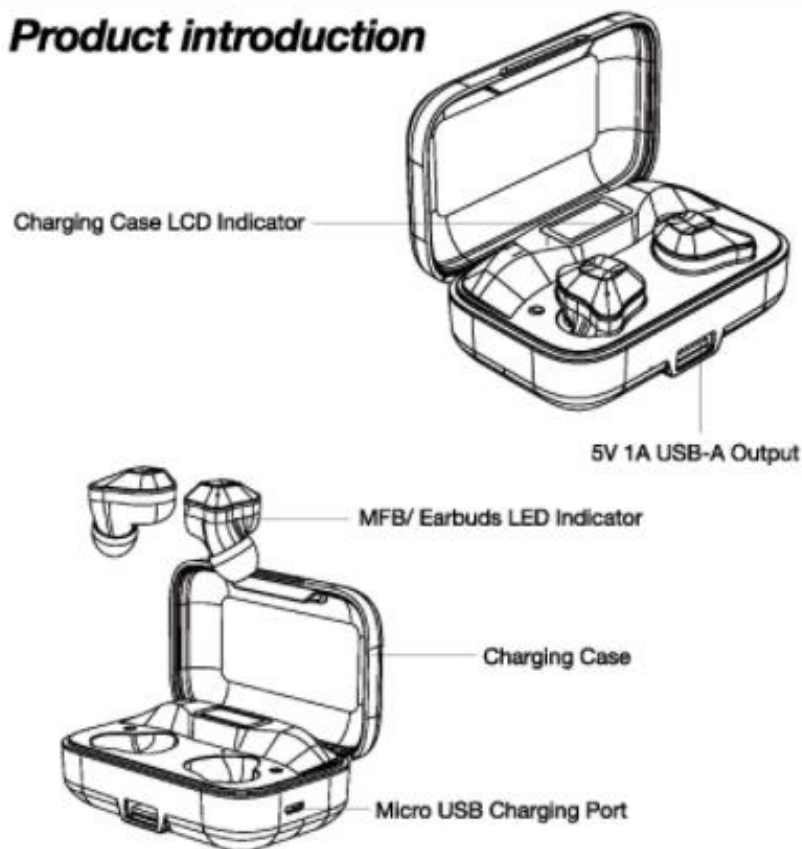

How to Use

Power on: Take the earbuds out of the case, the power will turn on automatically.

You can also touch and hold MFB button for 2 seconds to turn on the power manually.

Power off: Put the earbuds back into the case, the power will turn off automatically.

You can also touch and hold MFB for 4 seconds, the red light on the indicator will shut off, the earbuds will turn off.

*If the 2 earbuds are connected, press one of the earbuds, the 2 earbuds will turn off simultaneously.

LED Light Indicator:

Earbuds LED Light Indicator

Pairing Mode:	Flashing blue and red light
Earbuds Connected:	One flashes blue and red, the other one flashes blue 1 time every 5 seconds
Phone Connected:	Both earbuds flash blue 1 time every 5 seconds
Battery Low:	Flashing red
Charging:	Red light on
Charging finished:	Blue light on for 1 min then shut off



1. Left Earbud Battery Level
2. Charging Case Battery Level
3. Right Earbud Battery Level

Pairing Instruction:

Take the 2 earbuds out of the box, they will automatically pair first, one earbud flashes blue, the other one flashes blue and red indicate pairing is completed.

Turn on the Bluetooth of your phone, connect to "Energizer_UB2609". Open your phone music player app and play, you can enjoy music wirelessly.

Auto-connect:

 
Turn on the Bluetooth on your phone first, and then turn on the earbuds. It will automatically connect the last paired phone device when turned on next time.



Button Operation:

Touch and hold MFB for 2 seconds:
Switch to next(R) or previous(L) music


- Touch 1 time during music mode or call:
Play/Pause or Answer/Hang up
- Touch 2 times: Redial
- Touch 3 times: Activate phone voice control
- Touch and hold for 4 seconds: Power off

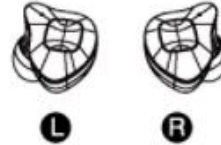

How to Charge:
DC 5V 1A USB output can charge your smart devices.



 How to Recharge:
Connect the charging cable to the box, and connect to a power outlet to recharge

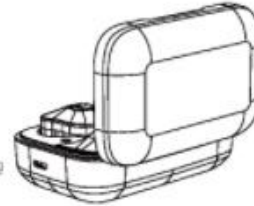

RF Exposure Compliance Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

CORRECT DISPOSAL OF THIS PRODUCT

(Waste Electrical & Electronic Equipment)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household user should contact either the retailer where they purchased this product or their local government office for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Safety Instruction

- Avoid water, heat, fire, penetration of the battery, and severe drops at all times.
- Do not insert other objects into the USB ports other than the USB connectors.
- Once the product is fully charged, your power pack automatically shuts off to save power.
- During charge & recharge, battery may feel slightly warm.
- Do not clean the battery with water or other cleaning products, clean the exterior with a lightly wetted cloth or napkin
- Any intentional and physical damage to the battery will not be under the warranty conditions
- Battery storage temperature is between -10°C--+60°C, operating temperature is 0°C~45°C
- Fully charge the battery before first use to maximize the battery life
- Recommend to recharge your power bank with a wall charger/adapter.
- For better performance, avoid recharging the power bank while your device is connected to it.
- Dispose of battery properly; ask local disposal facility for advice.
- Do not disassemble, damage or incinerate the battery at any time.
- Please use the original accessories such as charging cable and adapter for better performance

WARRANTY

All products from the date of purchase are qualified for limited time warranty. For more warranty information, please visit: <http://www.energizerpowerbanks.com>



PowerSafe Management

Guarantees against short circuit and over-charging for your power bank and devices.



Customer Service

For any question about the product, please contact us at service@energizerpowerbanks.com



Dispose the battery properly, seek for local disposal facility for advice.
Do not dispose, disassemble, damage, or incinerate the battery at all time.

© 2020 Energizer. Energizer and certain graphic designs are trademarks of Energizer Brands, LLC and related subsidiaries and are used under license by TennRiich International Corp. All other brand names are trademarks of their respective owners. Neither TennRiich International Corp. nor Energizer Brands, LLC is affiliated with the respective owners of their trademarks.