

ML-FM Installation Instructions

1. Two people are recommended for proper installation.

2. Required tools: One hand held Philips screw driver
(Do not use powered screw driver)

3. Check ML-FM box for contents:

- ML-FM: (These parts are connected by a power cord)
 - i. Part A: Neck and Light head
 - ii. Part B: Base plate and Battery Pack
- Part C: Hardware packet includes- 2 small set screws, 2 wood screws, 1 cord clip w/ screw
- Part D: Charging cord extension
- Part E: AC Adapter Charger
- Part F: Remote control




4. Carefully remove Parts A and B

5. Loosen connection point at the center of the neck (Part A, circled in RED) and gently pull. At the same time feed in the cord at the base of the neck (Part A) until the neck is full extended, there will be about four inches of cord still exposed. Tighten connection point (Part A, circled in RED).




6. Connect parts A & B: Screw set screws (Hardware Packet) through the holes in the base plate (Part B) into threaded holes at the base of the neck (Part A.) Make sure holes are aligned. DO NOT bend or twist parts while attaching.

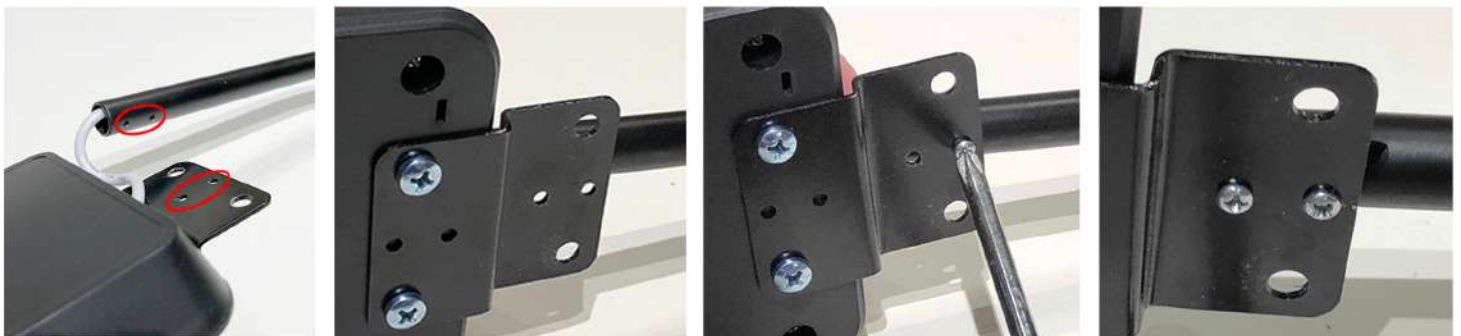


(Continued on Back)

7. Attach ML-FM to Frame: A. Center the ML-FM of the frame. B. Place the lip of the base plate (Part B in the BLUE circle) on to the bottom edge of the frame(In the RED circle). C. Make sure the base plate is level with the frame. D & E. Using the wood screws (Hardware Packet) attach the base plate to the frame by screwing through the holes in the base plate into the frame. F. Make sure base plate is securely attached.

(Shown on frame with no backing paper, if backing paper is present screw through it as in Step 8)

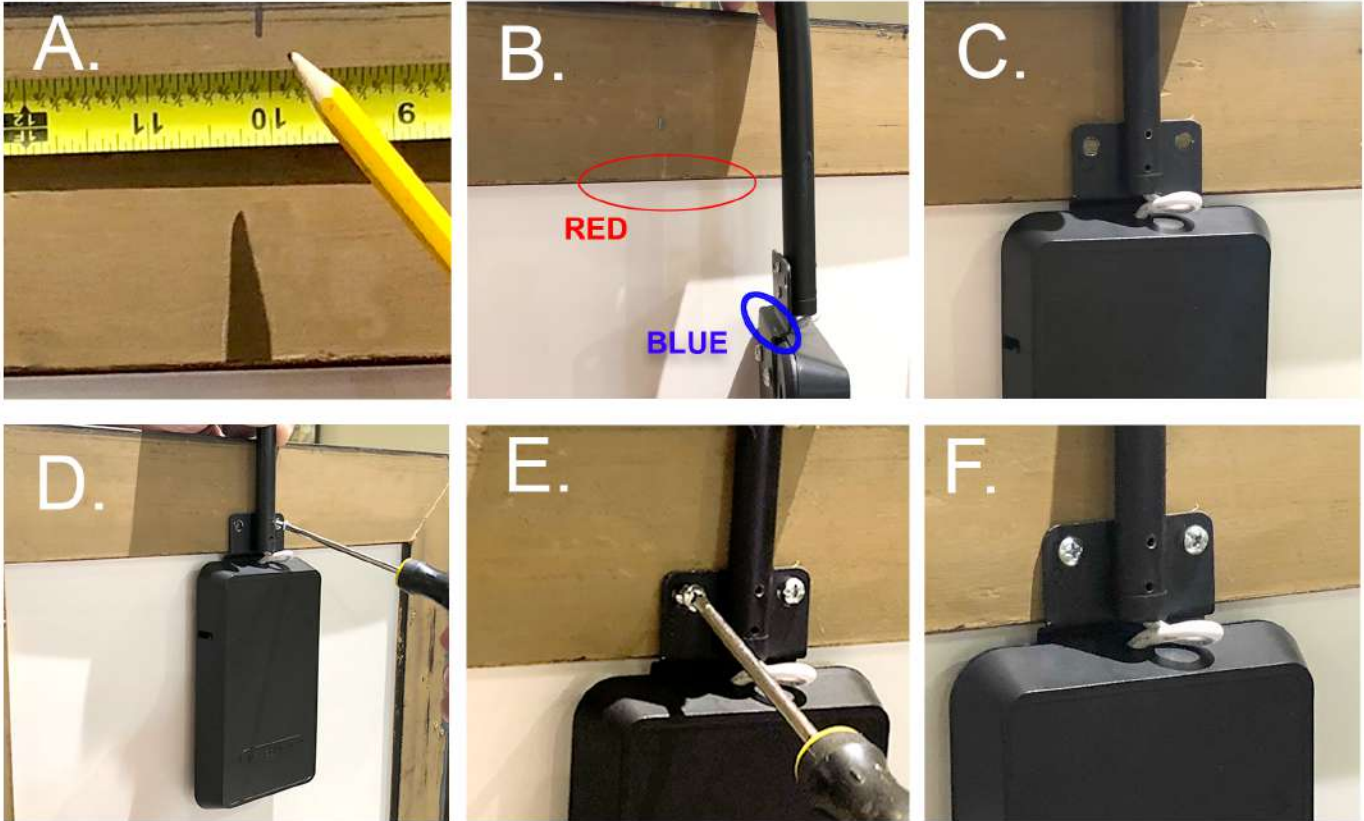

8. Attach Charging Cord: Untie charging cord and keep the twist tie (Part D). A.& B. Plug cord into battery pack C. Place cord clip (Hardware Packet) on to female end of the cord. Select the best side and location to mount the charging cord on, based on convenience to a power outlet. D. Screw the cord clip to the frame, making sure it is concealed when not in use. F. Tie excess cord together with twist tie to keep it out of the way.

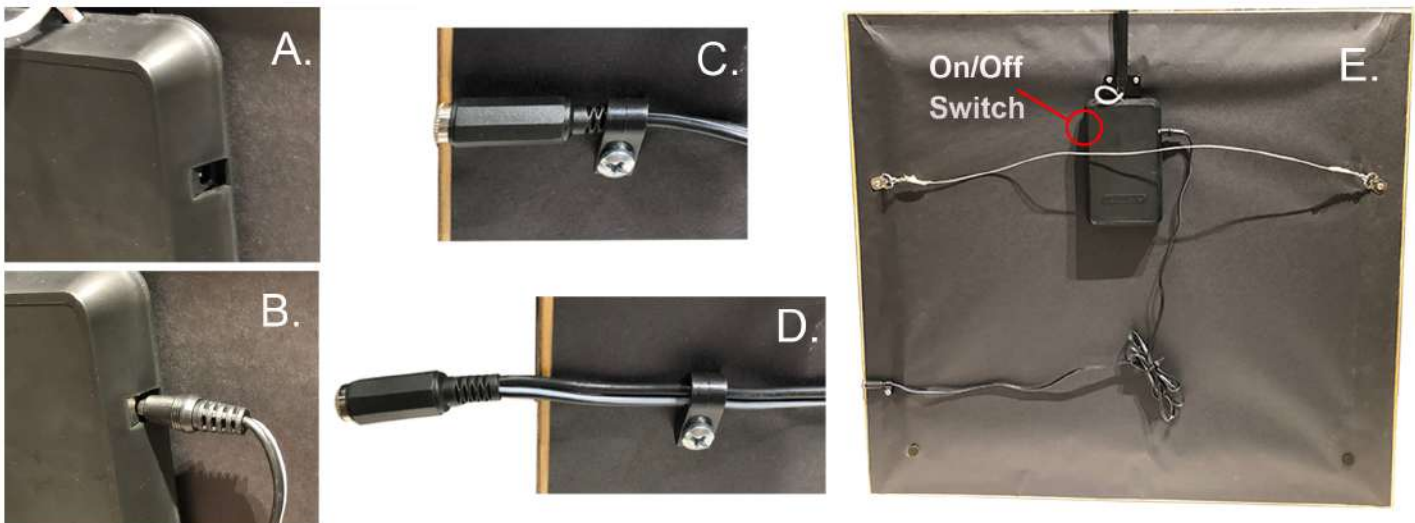

9. Make sure the power switch is turned ON and follow the Easy Start Up portion of the Operations Manual. For assistance please contact us at (800) 506-8097, cs@methodlights.com or go to www.methodlights.com